

Figure 1

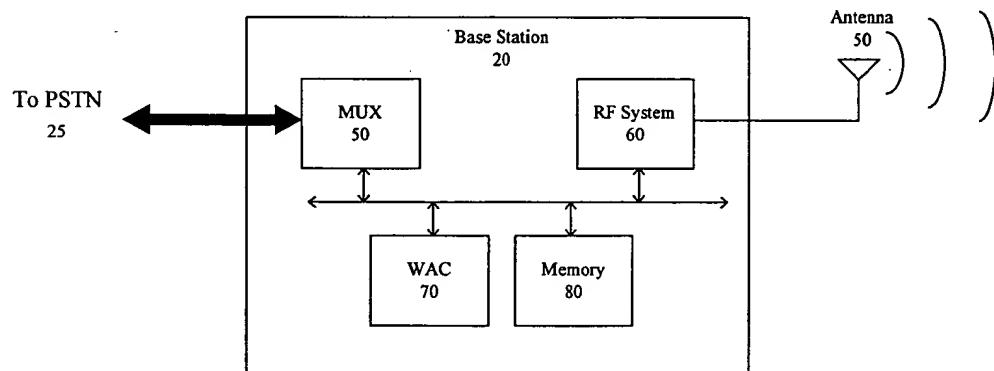


Figure 2

RP

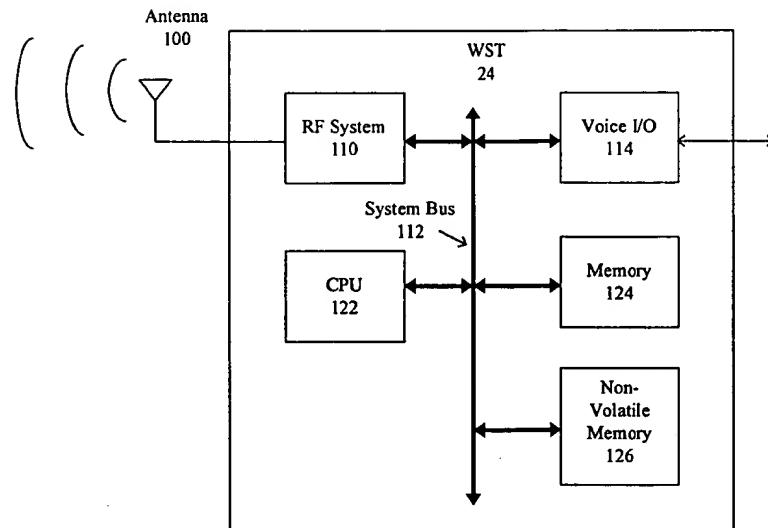


Figure 3

Broadcast Firmware Start (BFS)																									
152	154	156	158	160	162	164	166	168																	
150	H/W Model	H/W Ver	S/W Ver	Feature Set	Trans ID #	Force	Auto Switch	Block Size	Num Blocks																
BS -> WST																									
Broadcast Firmware Start Response (BFSR)																									
160	184																								
180	Trans ID #	Resp. Code																							
WST -> BS																									
Broadcast Firmware Block (BFB)																									
160	194																								
190	Trans ID #	Block #	Block Contents																						
BS -> Broadcast																									
Broadcast Firmware Status Request (BFSReq)																									
200																									
BS -> WST																									
Broadcast Firmware Status (BFStat)																									
212	160	216	218																						
210	Status Code	Trans ID #	# Blocks Rx	Missing Blocks Mask																					
WST -> BS																									
Firmware Switch-Over																									
220																									
BS -> WST																									

Figure 4

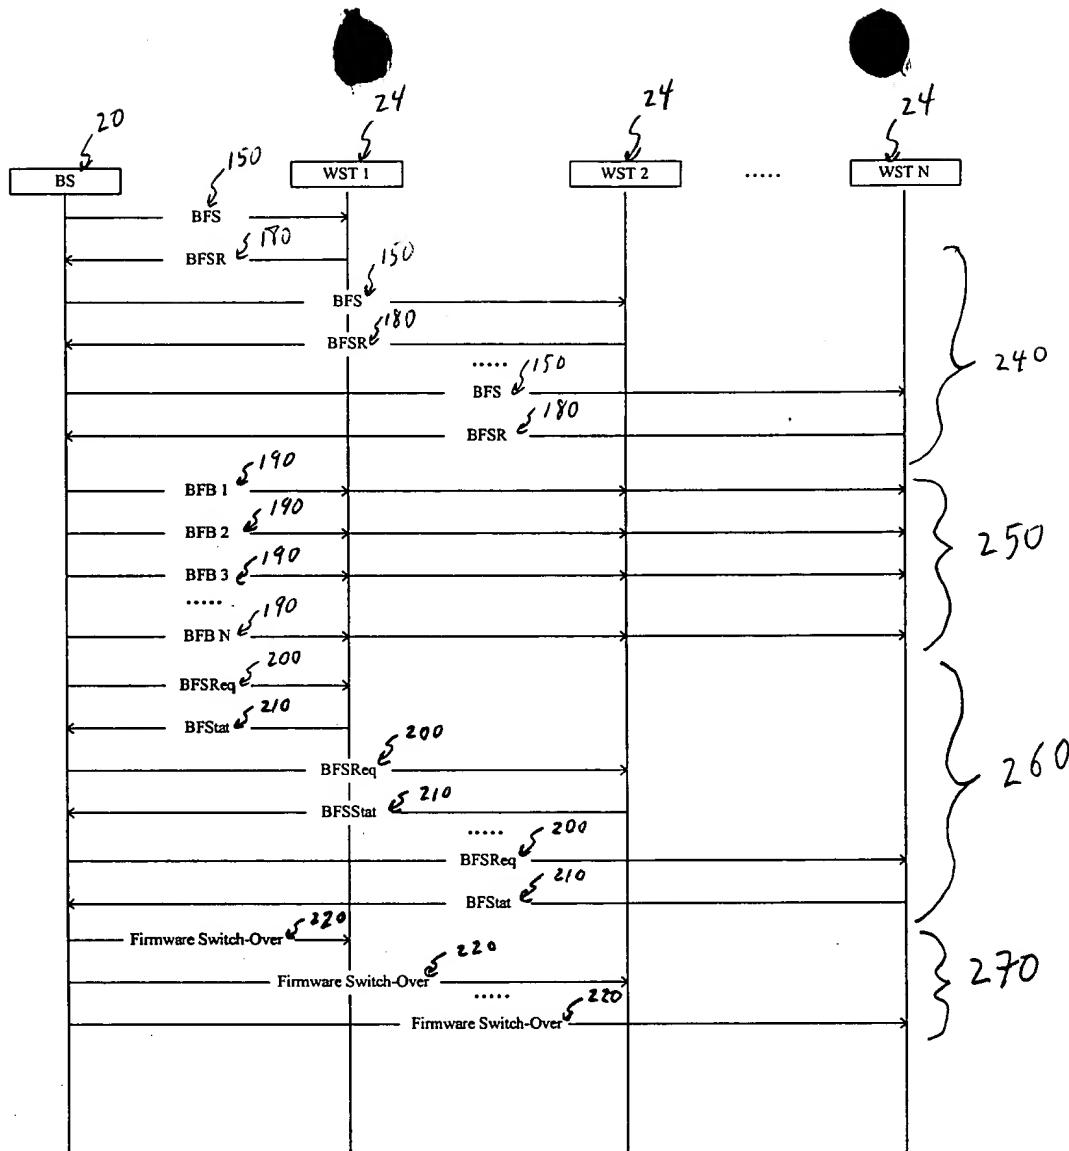


Figure 5